

AURO BEAM 150

DMX CONTROL TABLE



5-CH Mode					
CH1	Dimmer	000	-	255	general Dimmer
CH2	Colour Macro Mode	000	-	008	no function
		009	-	020	red
		021	-	032	green
		033	-	044	blue
		045	-	056	bright blue
		057	-	068	cyan
		069	-	080	turquoise
		081	-	092	cold green
		093	-	104	warm green
		105	-	116	pink
		117	-	128	magenta
		129	-	140	purple
		141	-	152	orange
		153	-	164	yellow
		165	-	176	warm white
		177	-	188	cold white
		189	-	210	auto colour change
		211	-	232	auto colour fading
233	-	255	Sound Mode (Colour change)		
CH3		000	-	255	Auto Mode Lighting Pattern Speed (slow to fast) / Sensitivity
CH4	Auto Mode	000	-	015	no movement
		016	-	075	Movement Pattern 1 (eight)
		076	-	135	Movement Pattern 2 (ellipse)
		136	-	195	Movement Pattern 3 (random)
		196	-	255	Sound Mode
CH5		000	-	255	Auto Mode Motor Speed (slow to fast) / Sensitivity

11-CH Mode					
CH1	Mechanic Control	000	-	255	Pan Rotation
CH2		000	-	008	no function
		009	-	124	clockwise pan rotation (fast to slow)
		125	-	139	no movement
CH3		140	-	255	counter clockwise pan rotation (slow to fast)
		000	-	255	Tilt Rotation
CH4		000	-	008	no function
		009	-	124	clockwise tilt rotation (fast to slow)
		125	-	139	no movement
		140	-	255	counter clockwise tilt rotation (slow to fast)
CH5		000	-	255	Motor Running Speed (fast to slow)

CH6	Light Control	000	-	255	General Dimmer
CH7		000	-	255	Red Dimmer
CH8		000	-	255	Green Dimmer
CH9		000	-	255	Blue Dimmer
CH10		000	-	255	White Dimmer
CH11	Strobe	000	-	005	Strobe open
		006	-	010	Strobe closed
		011	-	249	Strobe slow -> fast 0Hz - 30Hz
		250	-	255	Strobe open

19-CH Mode						
CH1	Mechanic Control	000	-	255	Pan Rotation	
CH2		000	-	008	no function	
		009	-	124	clockwise pan rotation (fast to slow)	
		125	-	139	no movement	
		140	-	255	counter clockwise pan rotation (slow to fast)	
CH3		000	-	255	Tilt Rotation	
CH4		000	-	008	no function	
		009	-	124	clockwise tilt rotation (fast to slow)	
		125	-	139	no movement	
		140	-	255	counter clockwise tilt rotation (slow to fast)	
CH5		000	-	255	Pan Fine	
CH6		000	-	255	Tilt Fine	
CH7		000	-	255	Motor Running Speed (fast to slow)	
CH8		Light Control	000	-	255	General Dimmer
CH9			000	-	255	Red Dimmer
CH10	000		-	255	Green Dimmer	
CH11	000		-	255	Blue Dimmer	
CH12	000		-	255	White Dimmer	
CH13	Strobe	000	-	005	Strobe open	
		006	-	010	Strobe closed	
		011	-	033	Puls Random, slow -> fast	
		034	-	056	Ramp up Random, slow -> fast	
		057	-	079	Ramp down Random, slow -> fast	
		080	-	102	Random Strobe Effect, slow fast	
		103	-	127	Strobe Break Effekt, 5s.....1s (Very Short Flash)	
		128	-	249	Strobe slow -> fast 0Hz - 30Hz	
250	-	255	Strobe open			

CH14	Colour Macro Mode	000	-	008	no function
		009	-	020	red
		021	-	032	green
		033	-	044	blue
		045	-	056	bright blue
		057	-	068	cyan
		069	-	080	turquoise
		081	-	092	cold green
		093	-	104	warm green
		105	-	116	pink
		117	-	128	magenta
		129	-	140	purple
		141	-	152	orange
		153	-	164	yellow
		165	-	176	warm white
		177	-	188	cold white
		CH15	Lighting Auto Programs	000	-
009	-			024	Auto Program 1
025	-			040	Auto Program 2
041	-			056	Auto Program 3
057	-			072	Auto Program 4
073	-			088	Auto Program 5
089	-			104	Auto Program 6
105	-			120	Auto Program 7
121	-			136	Auto Program 8
137	-			152	Auto Program 9
153	-			168	Auto Program 10
169	-			184	Auto Program 11
185	-			200	Auto Program 12
201	-			216	auto colour change
217	-			232	auto colour fading
233	-			255	Sound Mode (Lighting pattern)
CH16				000	-
CH17	Auto Mode	000	-	008	no function
		009	-	023	Blackout
		024	-	081	Movement Pattern 1 (eight)
		082	-	139	Movement Pattern 2 (ellipse)
		140	-	197	Movement Pattern 3 (random)
		198	-	255	Sound Mode
CH18		000	-	255	Auto Mode Motor Speed (slow to fast) / Sensitivity
CH19	reset	150	-	200	Blackout and motor reset

41-CH Mode					
CH1	Mechanic Control	000	-	255	Pan Rotation
CH2		000	-	008	no function
		009	-	124	clockwise pan rotation (fast to slow)
		125	-	139	no movement
		140	-	255	counter clockwise pan rotation (slow to fast)
CH3		000	-	255	Tilt Rotation
CH4		000	-	008	no function
		009	-	124	clockwise tilt rotation (fast to slow)
		125	-	139	no movement
		140	-	255	counter clockwise tilt rotation (slow to fast)
CH5		000	-	255	Pan Fine
CH6		000	-	255	Tilt Fine
CH7		000	-	255	Motor Running Speed (fast to slow)
CH8		Dimmer	000	-	255
CH9	Strobe	000	-	005	Strobe open
		006	-	010	Strobe closed
		011	-	033	Puls Random, slow -> fast
		034	-	056	Ramp up Random, slow -> fast
		057	-	079	Ramp down Random, slow -> fast
		080	-	102	Random Strobe Effect, slow fast
		103	-	127	Strobe Break Effekt, 5s.....1s (Very Short Flash)
		128	-	249	Strobe slow -> fast 0Hz - 30Hz
		250	-	255	Strobe open
CH10	LED 1	000	-	255	Red Dimmer
CH11		000	-	255	Green Dimmer
CH12		000	-	255	Blue Dimmer
CH13		000	-	255	White Dimmer
CH14	LED 2	000	-	255	Red Dimmer
CH15		000	-	255	Green Dimmer
CH16		000	-	255	Blue Dimmer
CH17		000	-	255	White Dimmer
CH18	LED 3	000	-	255	Red Dimmer
CH19		000	-	255	Green Dimmer
CH20		000	-	255	Blue Dimmer
CH21		000	-	255	White Dimmer
CH22	LED 4	000	-	255	Red Dimmer
CH23		000	-	255	Green Dimmer
CH24		000	-	255	Blue Dimmer
CH25		000	-	255	White Dimmer
CH26	LED 5	000	-	255	Red Dimmer
CH27		000	-	255	Green Dimmer
CH28		000	-	255	Blue Dimmer
CH29		000	-	255	White Dimmer

CH30	LED 6	000	-	255	Red Dimmer
CH31		000	-	255	Green Dimmer
CH32		000	-	255	Blue Dimmer
CH33		000	-	255	White Dimmer
CH34	LED7	000	-	255	Red Dimmer
CH35		000	-	255	Green Dimmer
CH36		000	-	255	Blue Dimmer
CH37		000	-	255	White Dimmer
CH38	Colour Macro Mode	000	-	008	no function
		009	-	020	red
		021	-	032	green
		033	-	044	blue
		045	-	056	bright blue
		057	-	068	cyan
		069	-	080	turquoise
		081	-	092	cold green
		093	-	104	warm green
		105	-	116	pink
		117	-	128	magenta
		129	-	140	purple
		141	-	152	orange
		153	-	164	yellow
		165	-	176	warm white
		177	-	188	cold white
189	-	210	auto colour change		
211	-	232	auto colour fading		
233	-	255	Sound Mode (Colour change)		
CH39	Lighting Auto Programs	000	-	008	no function
		009	-	024	Auto Program 1
		025	-	040	Auto Program 2
		041	-	056	Auto Program 3
		057	-	072	Auto Program 4
		073	-	088	Auto Program 5
		089	-	104	Auto Program 6
		105	-	120	Auto Program 7
		121	-	136	Auto Program 8
		137	-	152	Auto Program 9
		153	-	168	Auto Program 10
		169	-	184	Auto Program 11
		185	-	200	Auto Program 12
		201	-	216	auto colour change
		217	-	232	auto colour fading
233	-	255	Sound Mode (Lighting pattern)		
CH40		000	-	255	Auto Mode Speed (slow to fast) / Sensitivity
CH41	reset	150	-	200	Blackout and motor reset