

SWINGBAR Mode d'emploi



Connectique :

- Powercon alimentation, + repiquage
- XLR 3 broches mâle et femelle

Menu :

Bouton : 
ESC navigation dans le menu
UP DOWN : changement des programmation
ENTER : Validation des fonctions

MENU :
ADDR : selection de l'adresse DMX par UP/DOWN validation par ENTER
SLMD-MAST : Modes maitre ou esclave
SHMD : Show mode selection SOUN (mode musical) – AU1 (mode auto) -AU2 (mode auto)
MANU : possibilité de fonctionnement manuel led par led
SENS : sensibilité audio de 0 à 99
LED : allumage des leds ou pas
TEST : mode test
VER : affichage de la version logicielle

Menu DMX

CANAL	VALEUR	Fonctions
1	0-255	Tilt
2	0-255	Tilt 16 bits
3	0-127	Shutter toutes led OFF
	128-255	Shutter toutes led ON
4	0-255	Strobe toutes led
5	0-127	LED 1 OFF
	128-255	LED 1 ON
6	0-127	LED 2 OFF
	128-255	LED 2 ON
7	0-127	LED 3 OFF
	128-255	LED 3 ON
8	0-127	LED 4 OFF
	128-255	LED 4 ON
9	0-127	LED 5 OFF
	128-255	LED 5 ON
10	0-127	LED 6 OFF
	128-255	LED 6 ON
11	0-127	LED 7 OFF
	128-255	LED 7 ON
12	0-127	LED 8 OFF
	128-255	LED 8 ON
13	0-127	Shutter tous laser OFF
	128-255	Shutter tous laser ON
14	0-255	Strobe tous laser
15	0-127	Laser 1 OFF
	128-255	Laser 1 ON
16	0-127	Laser 2 OFF
	128-255	Laser 2 ON
17	0-127	Laser 3 OFF
	128-255	Laser 3 ON
18	0-127	Laser 4 OFF
	128-255	Laser 4 ON
19	0-127	Laser 5 OFF
	128-255	Laser 5 ON
20	0-127	Laser 6 OFF

	128-255	Laser 6 ON
21	0-127	Laser 7 OFF
	128-255	Laser 7 ON
22	0-127	Laser 8 OFF
	128-255	Laser 8 ON
23	0-15	Mode manuel LED
	16-255	Programmes auto led
24	0-255	Vitesse programmes led
25	0-15	Mode manuel Laser
	16-255	Programmes auto laser
26	0-255	Vitesse programmes laser
27	0-15	Mode manuel LED + laser
	16-255	Programmes auto led + laser
28	0-255	Vitesse programmes led + laser